


German Automotive Tool Innovator



C-CLAMP AND BASE FRAME KIT

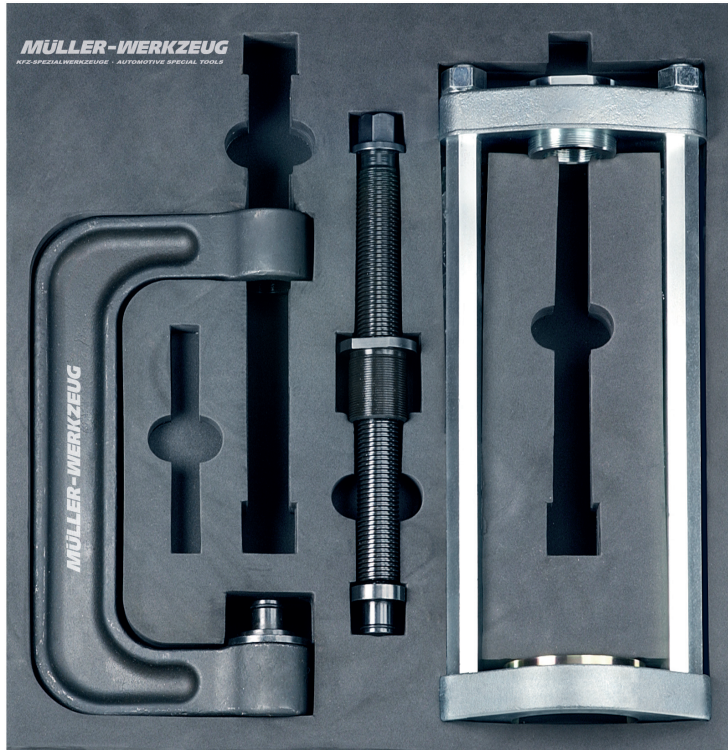

609 316



609 460

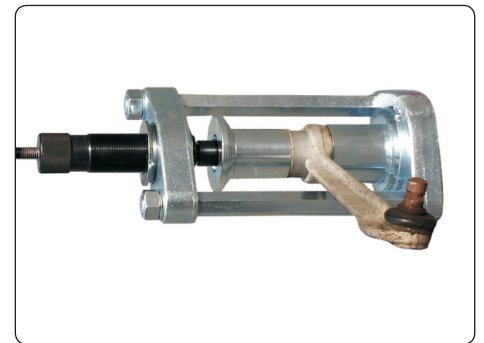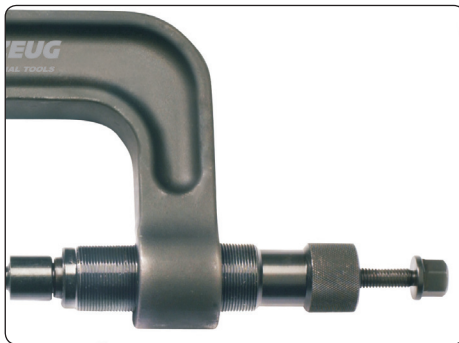

A supplementary tool for # 609 390, # 609 399 and # 609 400, Universal Press Pull Sleeve Kit.

Specifically made for use with **impact tools** to increase power and speed.

609 465 Combo with # 609 315 + # 609 460 in foam inlay